

Analogue Tyre Deflator Instructions Guide

Step 1

Remove valve cap.



Step 2

Attach Direction-Plus Tyre Deflator to valve stem by supporting hose collar and rotating the valve stem adaptor in clockwise direction.



Step 3

Push hose collar towards valve. Push valve remover towards valve and turn in an anti-clockwise direction until air pressure in tyre pushes valve and valve remover away from valve stem.



Gauge will now indicate tyre pressure.



Step 4


Slide hose collar away from valve stem.

The tyre will now begin to deflate. Once a desired air pressure is reached, slide collar back towards valve stem.



Step 5

Push valve remover back in and screw in a clockwise direction until valve is tight.

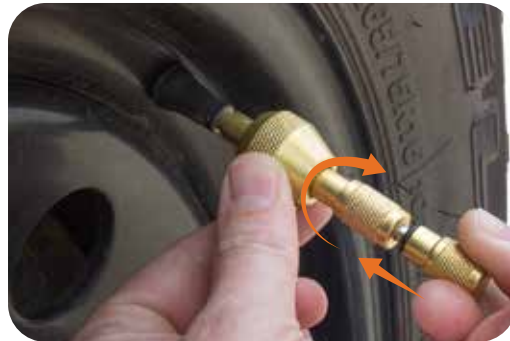

Step 6

Remove Direction-Plus Tyre Deflator and refit the cap.



[THE FIRST LINE OF DEFENCE]

www.directionplus.com.au