

TOYOTA Land Cruiser 75 Series Direction-Plus™ Post-Filter Kit Installation Guide


This document is to be used as a guide for the installation of the **Direction-Plus™ Fuel Manager™ Post-filter Kit** to a **Toyota 75 series (PF616DPK).** It is recommended that the installation of the product be carried out by a competent qualified mechanic.

Important before starting

- Ensure the engine bay is clean and free from contaminants
- · The fuel manager filter head has direction arrows indicating the direction of flow
- You have the correct tools to complete the fitment
- Read the instructions in full and familiarize yourself with the installation, before commencing any work

Kit contents


	2
1x NPT STRAIGHT - 12MM	1
1x 2 BOLTS 2 NUTS 4 WASHERS	1
1x BRACKET - 70 SER LANDCRUISER	4
2x DFL12 - FUEL LINE RUBBER (12MM)	2
2x DP733-04 - NPT PLUG	1
1x FM ENGINE BAY LABEL	1
FM100 30 MICRON FILTER ASSY	1
FMC12 - CLAMP 12MM	2
LOCTITE 567 THREAD SEALANT - 6ML	1
P CLAMP 20MM	4
PUSH ON STRAIGHT - 12MM	2
WINDSCREEN LABEL	1

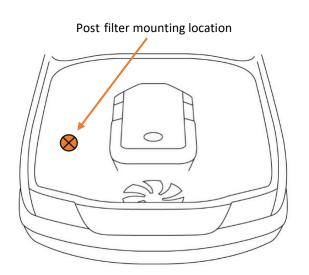

 $[\]hbox{\rm *Kit contents are subject to change based on component availability and/or refinement}\\$



Fuel Manager Post-Filter Normal Flow Header Connection

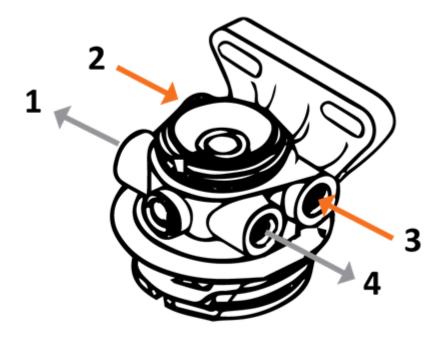

Ports 2 and 3 = INLET Ports 1 and 4 = OUTLET



Installation Guide

- 1. Remove inlet hose from original/ factory fuel filter.
- 2. Remove the three (3) retaining bolts holding the power steering reservoir on the driver's side inner mudguard (just behind the airbox).
- 3. Install the Direction Plus bracket by sliding it under the power steering reservoir.
- 4. Refit the three (3) retaining bolts into the power steering reservoir and tighten to original specifications.
- 5. Ensuring you have a push-lock barb fitting on the INLET and OUTLET side, install the ¼ NPT barb fittings into the Direction Plus filter assembly using the supplied LOCTITE thread sealant.
- 6. Lubricate the barbed end of one (1) of the push-lock fittings and the inside portion of the hose to be fitted with a push-lock fitting with diesel fuel or WD40.
- 7. Insert the barbed end of one (1) of the push-lock fittings into the pre-lubricated end of the hose. Ensuring that the hose is firmly stopped against the inside of the bell cover.
- 8. Fit the supplied fuel line to the INLET side of the factory Toyota final filter and to the OUTLET side of the Direction Plus Post-Filter assembly.
- 9. Fit the original/ factory supply fuel line in to the INLET port of the Direction Plus Post-Filter.
- 10. Reconnect outlet pipe of the factory filter to the inlet of the common rail supply pump.
- 11. Apply a small amount of LOCTITE thread sealant (supplied) to the two (2) remaining black ¼ NPT plugs and install them in to the two (2) remaining ports on the Direction Plus Post-filter head/ assembly.
- 12. Ensure all fuel lines are suitably secured.
- 13. Using the supplied nylon cable ties, secure any loose hose to prevent it from rubbing against any other components.
- 14. Prime the system using the hand primer on the factory filter. When the primer goes firm, the engine is ready to start.
- 15. Start and run the engine whilst checking ALL connections for leaks.

END OF GUIDE