


TOYOTA LANDCRUISER VDJ79

240079

1. The Steinbauer mounting bracket mounts on the driver side of the engine bay utilizing the power steering fluid reservoir mounting bolts and picks up a threaded hole on the inner guard

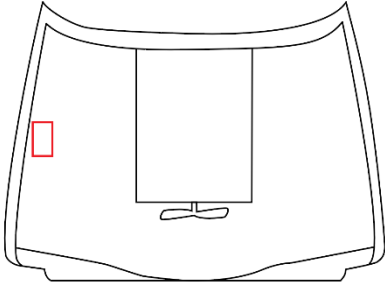

2. Remove the 2x bolts holding the reservoir down on the back side of the canister, as pictured. Loosen the front mounting bolt.
3. Slide the bracket under the reservoir and refit the 2x bolts that were removed, leaving them loose. Install the 8mm bolt into the top support piece. You may have to slightly bend the mounting bracket for the small fuse box next to the Steinbauer mounting bracket. Tighten all mounting bolts and the third bolt on the power steering reservoir.

4. The Steinbauer mounting bracket can be used to mount other accessories onto the vertical face, seen here is a catch can installed onto it. The fuel manager filter system and also an ARB compressor may be mounted onto this bracket.



5. Feed the Steinbauer harness up through the mounting bracket. Clip the Steinbauer harness onto the module. Run the harness along the engine bay, using Zip ties to secure the harness away from any hot or sharp surfaces. Connect the module onto the injector drivers following the Steinbauer module instructions. Check the function of the LED light on the module. Once completed use Zip ties to secure the module to the bracket in each corner of the module as pictured.